
1.7.4. LENZE-BRAKE BFK458-14N (5hp S.S.)

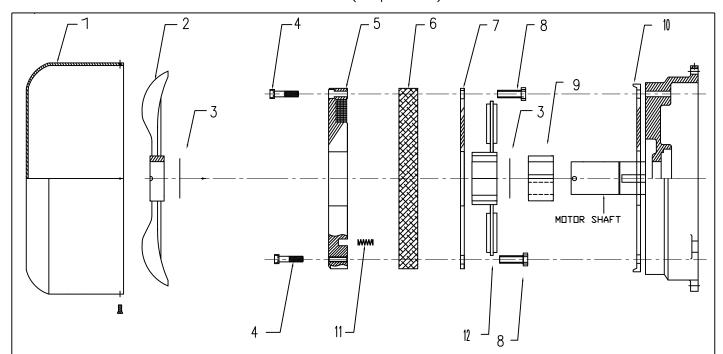

ADJUSTMENT PROCEDURE:

NOTE: AIR GAP SETTING 0.012" TO .015" (.3mm TO .4mm)
MAXIMUM AIR GAP, .6mm

- 1. REMOVE THE FAN COVER.
- 2. REMOVE THE FAN BLADE.
- 3. REMOVE THE DUST BAND.
- 4. LOOSEN THE ASSEMBLY BOLTS
- 5. ADJUST THE AIR GAP BY FOLLOWING THE LISTED PROCEDURE:
 - A, MEASURE THE AIR GAP AT THREE POINTS NEAR THE ASSEMBLY BOLTS USING A FLAT FEELER GUAGE
 - B, IF THE MAXIMUM AIR GAP HAS BEEN REACH OR THE MEASUREMENT DO NOT MATCH, LOOSEN THE 3 ADJUSTING SCREWS
 - C. TIGHTEN THE 3 ASSEMBLY BOLTS EQUALLY TO THE RECOMMENDED AIR GAP. THE AIR GAP VALUE MUST BE UNIFORM IN THE THREE MEASURING POINTS.
 - D, TIGHTEN THE ADJUSTING SCREW UP TO THE POINT THEIR END SEATS ON THE BRAKE FRICTION PLATE OR MOTOR HOUSING. DO NOT TIGHTEN EXCESSIVELLY. RETIGHTEN THE ASSEMBLY BOLTS FIRMILY
 - E, RECHECK FINAL AIR GAP SETTINGS
- 6. REINSTALL THE DUST BAND.
- 7. REINSTALL THE FAN BLADE.
- 8. REINSTALL THE FAN COVER.

 RECTIFIER PART No.#177-1885 FOR 220 volt

 RECTIFIER PART No.#177-1880 FOR 460 volt

 COMPLETE BRAKE PART No., NOT AVAILABLE

EXPLODED VIEW PART NAME:

- 1. #177-8738 FAN COVER
- 2. #177-8739 FAN BLADE qty, 1
- 3. #177-2515 SNAP RING qty, 2
- 4. #N/A ASSEMBLY BOLT qty, 3
- 5. #177-8741 BRAKE COIL, qty, 1
- 6. #177-8748 DUST BAND, qty, 1
- 7. #N/A ARMATURE PLATE, qty, 1 available ONLY with brake coil
- 8. #N/A ADJUSTING SCREW, qty, 3 available ONLY with brake coil
- 9. #177-8745 BRAKE HUB, qyt, 1
- 10. #177-8747 FRICTION PLATE, qty, 1
- 11. #N/A SPRING, qty, 9
 available ONLY with brake coil
- 12. #177-8743 ROTOR, qty, 1 MIN ROTOR THICKNESS, .2953 (7.5mm) STARTING ROTOR THICKNESS, .3905

